


# SETUP EMAIL NOTIFICATION.

1. Go to **Maintenance**.



2. **Email Notification.**

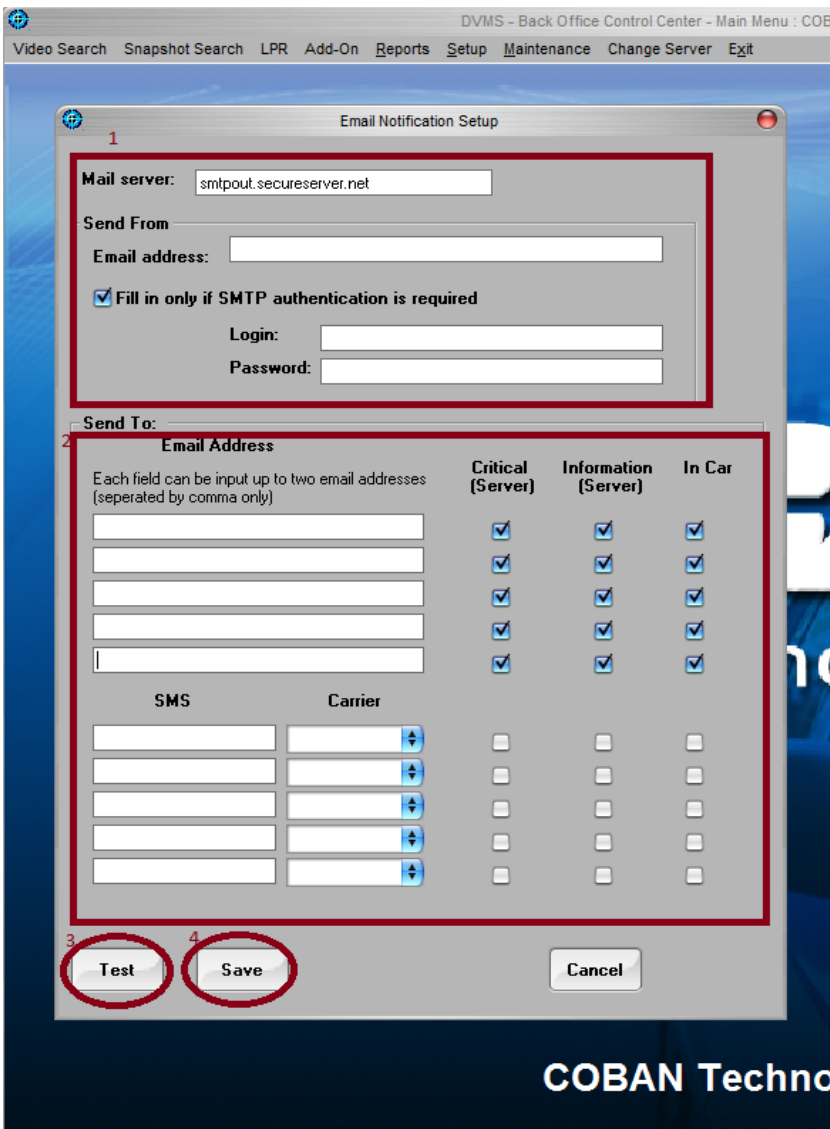

3. Fill in your Mail server
4. Fill in the Send From Email Address
5. Fill in “**Send To**” section. That’s a list of emails to receive notification.
6. Click on **Test**.
7. Verify email received.
8. Click **Save**.