

FUSION Cheat Sheet


Camera View Screen



Technical Support
1 (866) 81-COBAN
1 (866) 812-6226



Login

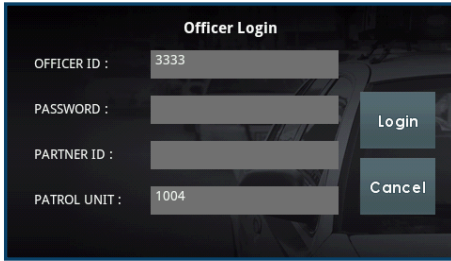

1. Press the Power button. A tone will sound, indicating the system is booting up.
2. The Login screen will appear, prompting the user to input their officer ID and password using the virtual keypad. Press Enter.
3. Press Login.
4. If the user does not have the proper credentials to log in, or they choose not to, pressing Exit will shut the system down.

Sync Microphone




1. To sync the microphone to the receiver, touch the microphone contacts (located on the bottom of the wireless microphone unit) to the receiver's register contacts.
2. A confirmation tone will sound to indicate the receiver and microphone have synchronized frequencies. The microphone is now in standby mode and ready for use.
3. If necessary, repeat these steps with any additional microphones, ensuring each is synced to its own receiver.

Recording



1. Press the top Record icon on Camera View screen to begin a recording using the primary camera.
2. Press the bottom Record icon to begin a recording using the secondary / backseat camera (optional).
3. Press the Record icon to stop recording using the primary camera. If an additional camera (optional) is installed, press the Camera 2 Record icon to stop recording using the secondary camera.

Menu Functions

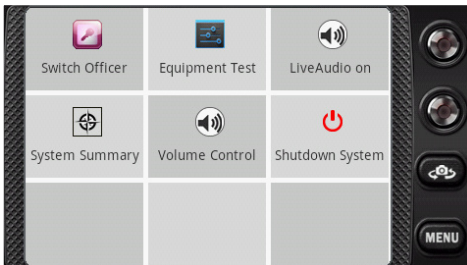

1. Press the Menu button on the Camera View screen.
2. Press the Menu button again to return to the Camera View screen.

Switch Officer – Each video is linked to the user ID that is logged in to the system at the time the video is captured. The system may be designated, through an internal command, to a different user.

Equipment Test – Equipment Test allows the user to test the wireless microphone and the covert microphone without triggering a recording.

Live Audio – Live Audio allows audio from the body-worn wireless microphone to be transmitted through the in-car system.

Shutdown System – When the vehicles is powered down, the FUSION system will go into shutdown mode. Select Shutdown System to manually shut down the system and remove the pen drive.

Preview Screen Functions

Camera Preview – The camera preview displays the image as seen through the camera lens. The default image is set for the front facing camera, in systems with the optional backseat camera.

Playback – This feature allows users to play back previously recorded video. Videos are labeled with date/time and event type.

Bookmark – Select the bookmark icon to mark a spot in a video for later review.

Instant Replay – This feature allows the user to play back the last ten seconds of activity in the camera's line of sight.

Snapshot – This button will take a JPG freeze frame image of the video displayed on the preview screen.

Zoom – Tap the center of the camera preview screen for a fixed zoom of the front-facing camera. Zoom is for viewing or snapshot purposes only and will not affect the video recording.

Record Buttons – The user may initiate a recording by pressing the wireless microphone, turning on the light bar or siren (if equipped as a system trigger), or pressing the Record icons on the screen.

Switch Camera – This button will switch between front and rear-facing cameras. (Only available with additional backseat camera)

Menu – Provides access to additional system functions, including switch officer, equipment test, speaker configurations and system shutdown.