


2012 Chevy Caprice Monitor Installation

Remove overhead dome light by pulling down the front dome light assembly and slide forward to release the two (2) latches.



Disconnect the cable to the dome light

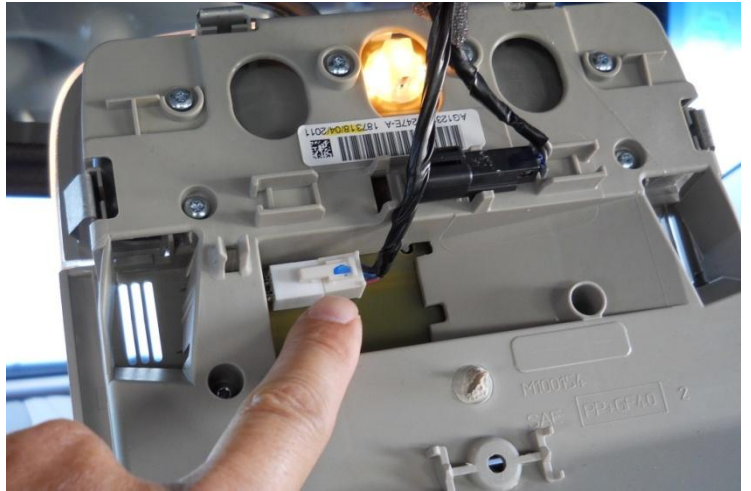

Remove the two (2) visor clips by removing the plastic tab on the back.




Remove the four (4) T20 Screws that hold the dome light compartment.



Slide in the Caprice adapter plate onto the roof crossbar of the vehicle.



Secure the back part of the adapter plate by using the two (2) provided 7/16 locking hex screws.

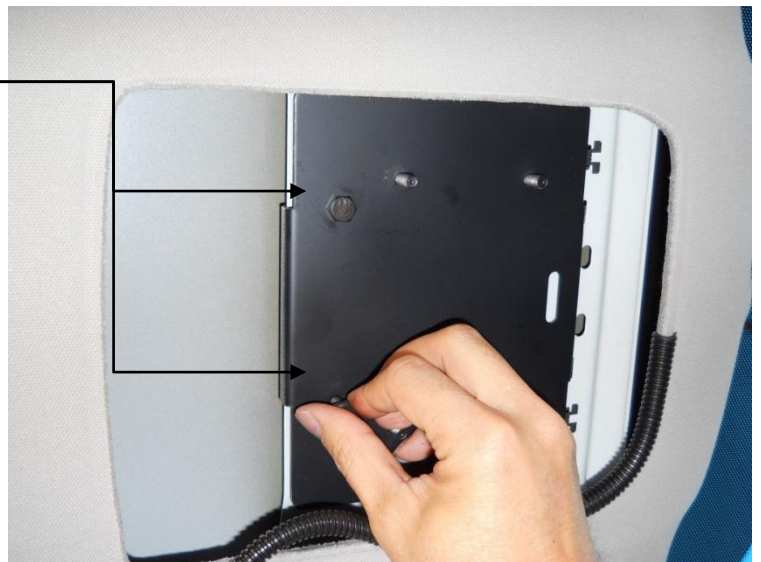


Secure the front of the adapter plate using one (1) provided 10-16 x 3/4" self tapping screws.



To ensure a solid mount, make sure the monitor mount is screwed onto the support beam.



Secure the monitor mount with four (4) 1/4-20 hex nuts.

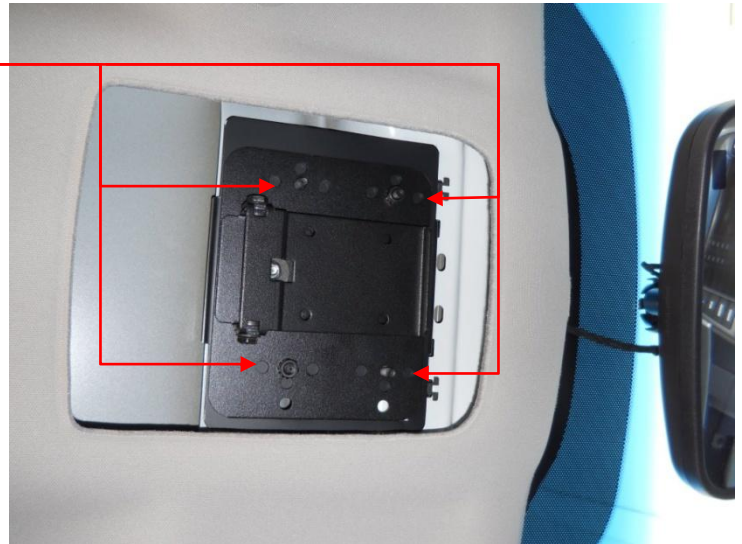

Use four (4) provided 10-32x 3/8" Philips pan head screws to secure the Edge monitor to the back of the monitor mount.



Dress the cutout of dome light area with 1/4" Split Loom.

