

2012 Tahoe Monitor Installation

Remove clear light cover from overhead dome light.




Remove the two (2) T15 screws to remove the overhead dome light.



Pull down dome light from the side farthest away from the windshield to release the dome light.



Disconnect all cables to the dome light except the passenger airbag light.

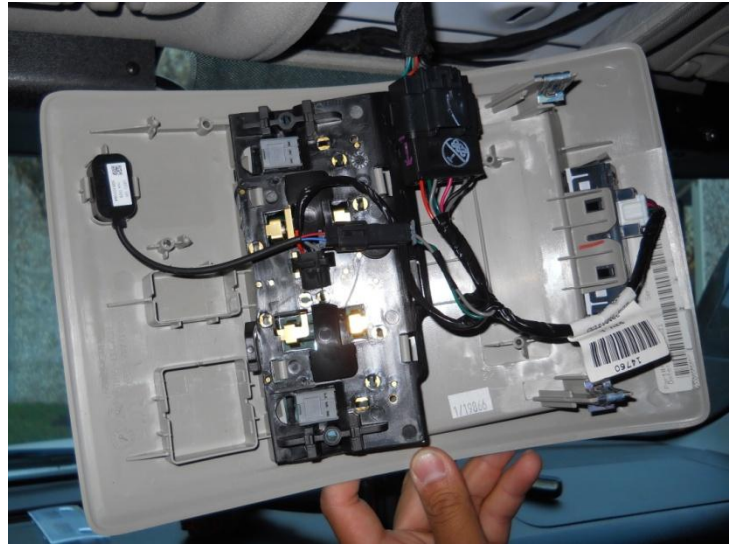

Remove the two (2) T15 Screws that hold the dome light compartment.



Use four (4) provided 10-32 x 3/8" philips pan head screws to secure the monitor mount to the back of the EDGE monitor.



Secure the EDGE monitor mount to the Tahoe adapter plate using the four (4) provided 10-32 x 3/8" Philips pan head screws



Secure the EDGE monitor mount to the Tahoe adapter plate using the four (4) provided 10-32 x 3/8" Philips pan head screws



Plug in passenger airbag light to the Tahoe adapter plate.



Make sure passenger airbag light is clipped in and secure.



Align monitor mount between the two visors



Secure the mount by using one (1) of the provided #10-16 x 1 1/4" self tapping screws to the front of the mount.



Secure the rest of the mount by using two (2) provided #10-16 x 1 1/4" self tapping screws to the round cutouts on the front of the mount.



Dress the dome light cutout with split loom.



Make sure monitor can freely rotate and secure cables with zip ties.

