

# 2015 Tahoe Monitor Installation

---

Remove clear light cover from overhead dome light.



Remove the overhead control panel's (OCP) outer piece to gain access to the light switch and led connector. Remove the light switch and connector from the outer piece.





Remove the 2 T-10 torx screws which hold the overhead control panel in place.



After removing the screws, carefully remove the entire overhead control panel.




---

With the OCP removed, unclip the main OCP harness connector.



---

Carefully unclip all push tabs, airbag light module and led light connectors.

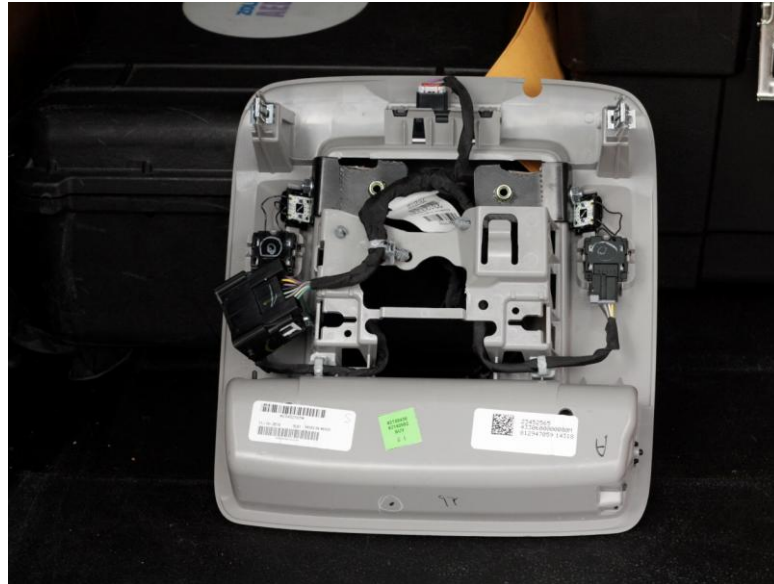






---

With the main harness detached from the OCP, install the airbag light module and light switch into the provided monitor bracket. Make sure the tabs from the light switch all clip in.

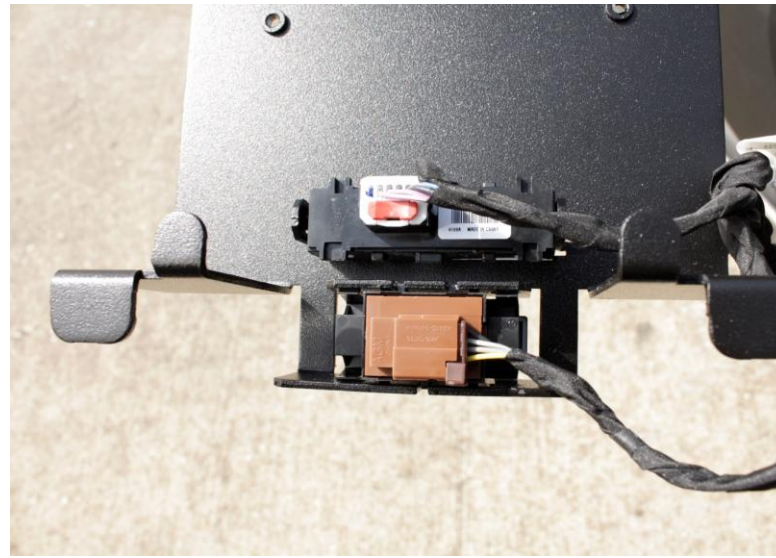

---

Reconnect the main harness connector





---

Install the monitor and loom the open area with  $\frac{3}{4}$ " loom.

