


# Attaching the Mounting Button to the Windshield

In order to achieve proper adhesion, follow these instructions exactly as written.


**IMPORTANT** : For proper adhesion, the windshield temperature must be between 50°F and 75°F (10° and 24°C). Do not install mounting button outside of this temperature range.

1. If you are replacing a previously installed mount, thoroughly scrape the inside windshield glass and the mounting button with a safety razor to remove any old adhesive.
2. Identify the location for the mount and wipe clean with the attached Alcohol Prep Pad.
3. Squeeze the activator tube until the vial inside breaks, releasing activator to the felt tip. Remove the paper sleeve.
4. Apply a generous amount of the activator to the smooth side of the mounting button and the windshield's button location.
5. Allow the activator to evaporate; this will take approximately 30 seconds depending on the temperature.

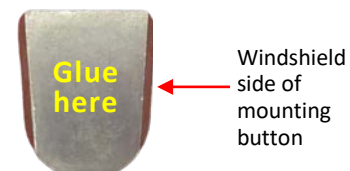

**DO NOT** touch the mounting surface of the button or the glass after applying the activator.

6. Cut or break off the cap from the adhesive tube and apply a drop of adhesive to the center of the windshield side of the mounting button.
7. Immediately apply the button to the windshield, making sure that the rounded end of the mounting button is pointing *downward*.
8. Hold the mounting button firmly in place for at least **one minute**. Be sure to use enough pressure so that the adhesive is evenly disbursed over the surface of the button.
9. Apply tape across the mounting button to hold it against the windshield. Allow the adhesive to set for at least **one hour** before hanging the camera.
10. Remove tape and clean any excess adhesive from the windshield.

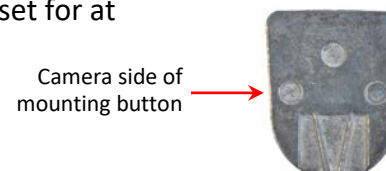

## NOTES:

- If after one minute the button is not firmly adhered, remove, clean windshield and button, and reapply.
- Never attempt to remove a properly adhered button. If you make an error, attach a new button in the correct location.