MVI-KF Adapter
Quick Installation Guide

This guide covers the installation procedures for the MVI-KF (Mobile-Vision Kick Fast) Adapter used to mount a body-worn camera.

Included Parts

The following parts are included in the MVI-KF Adapter kit:

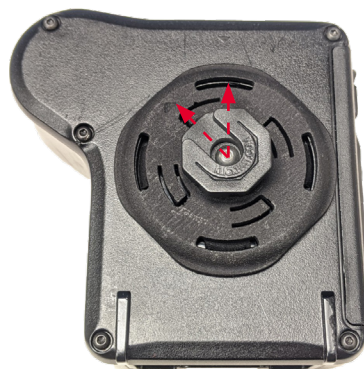| Part Name	Part Image	Part Number
MVI-KF Adapter		FOCUS-04-KFBWXAD
Installation tool		FOCUS-04-KFADINST

Installation Instructions

Step 1.

Remove the MVI Mag Mount from the back of the camera.

Step 2.

Center and position the MVI-KF Adapter with the arrow pointing at around 10:30 hrs. (as shown in the image).

Step 3.

Engage the supplied installation tool onto the MVI-KF Adapter. Make sure it engages properly and lays securely over the back of the camera.
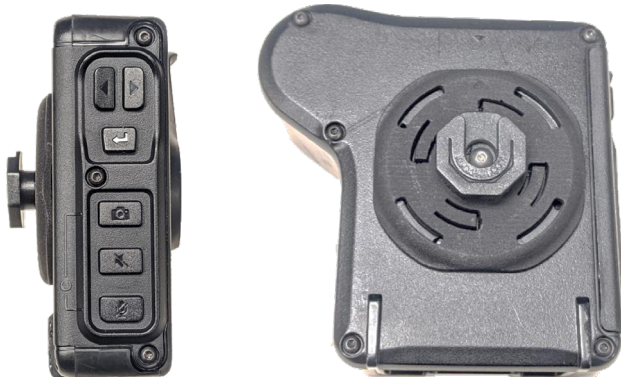
Step 4.

Using both hands, rotate the MVI-KF Adapter 45° clockwise with the help of the engaged installation tool; you should be able to clearly hear/feel four clicks coming from the locking clips. The tool should end up horizontal as shown in the image.

Step 5.

Disengage the installation tool and then make sure that the MVI-KF Adapter is properly installed. It should be properly engaged in the camera's back.

Service & Support

If your **MVI-KF Adapter** is to be returned for service, please visit the Safe Fleet Repair and RMA Procedures page https://community.safefleet.net/sfle/support/repair/ and follow the Mobile-Vision RMA procedure. An **RMA #** allows the support team to better track your product when it comes in for service. Please show the RMA # on the **outside** of the package.

ANY PRODUCT SENT WITHOUT AN RMA # MAY BE REFUSED!

Documentation and Warranty

Additional copies of this guide along with other documentation and product warranty can be found on the Safe Fleet Community website: https://community.safefleet.net

Technical Support

Phone: 1.800.336.8475, option 3   **Email**: mvisupport@safefleet.net