


# Installing the V-One


- 1 Attach the PCI Card Support to the back of the V-One and secure with thumbscrew.

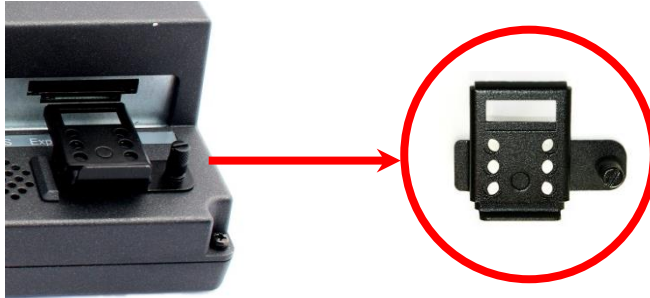

- 2 Install your console or pedestal mounting solution, as per the manufacturer's instructions.
- 3 If your mounting solution includes a mounting plate, connect that plate to the back of the V-One using M4 x .7 x 12mm Black Phillips Screws (part no. HDW-95836A339).



- 4 Connect the red power wire to the 15-amp main system fuse (red label) included in your hardware kit.
- 5 Connect the main system fuse to the battery positive terminal.
- 6 Connect the black ground wire to the vehicle chassis (ground).

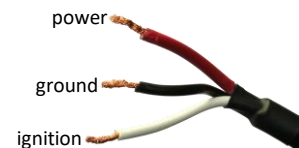


**NOTE:** If you also have a Flashback digital in-car video system installed in your vehicle, *both* the Flashback unit and the V-One must be grounded to the same point on the vehicle chassis.

- 7 Connect the white ignition wire to the 5-amp ignition fuse included in your hardware kit (see yellow label fuse).
- 8 Connect the ignition fuse to your vehicle's ignition source (see **EXCEPTION** below).



**EXCEPTION:** If the V-One will be installed in a vehicle that is always powered on (such as a fire truck), connect the ignition fuse to the battery positive terminal.

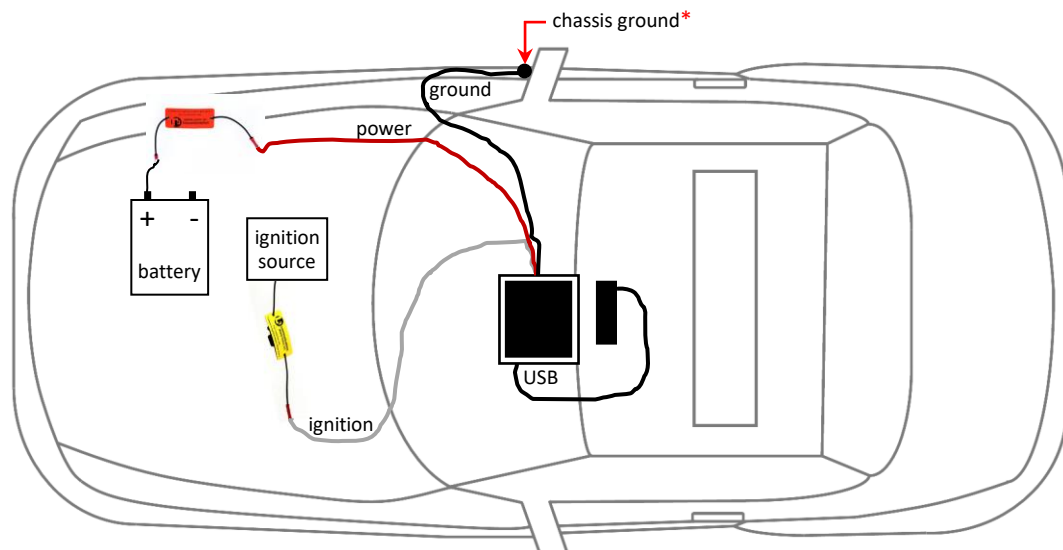

\* Exact location may vary

- 9 Connect your keyboard's USB cable to the V-One using one of the seven USB ports located on the bottom of the unit.

