

Mounting Post for Wedge Cameras Installation Instruction Sheet


These instructions apply to the following camera models:

CHW, CA, HD1W, HD3W


Kit Contents

4" Post Kit Contents	6" Post Kit Contents
CHW/CA Cameras	CHW/CA Cameras
Bracket, 4" Post	Bracket, 6" Post
660-0197	660-0200
4x screws, #10 x 3/4"	4x screws, #10 x 3/4"
600-0038	600-0038
3x screws, 10-32 x 1/2"	3x screws, 10-32 x 1/2"
600-0095	600-0095
3x screws, 10-32 x 1/4"	Instruction sheet
600-0096	700-0169
Instruction sheet	
700-0169	

Use the base as a drilling template to lay out the drilling pattern.

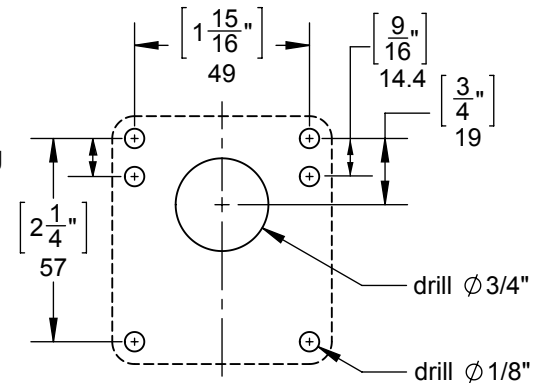

Attach to the vehicle using the mounting screws (600-0038) provided with the camera.

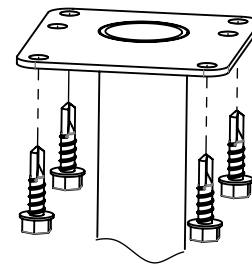

Installation Steps

- Determine the location for mounting the camera.
Cameras must be installed with the cabling running through the post, and inside the wall panels.
- Determine which 4 of the 6 available screw holes will be used to fasten the mounting post to the vehicle.
Using the drilling template, lay out the drilling pattern.
- Drill the four screw (1/8") holes in the panel.
- Drill the cable (3/4") hole in the panel.
Remove any sharp edges to avoid damage to cable.
- Thread the camera cable from the panel hole through the post.
- Using the 4 screws provided, fasten the mounting post to the vehicle panel.
- Pull the camera cable through the mounting post and connect to the DVR.
- Feed the cables back into the panel while fitting the camera base to the mounting post.
- Using the screws provided for your camera, attach the camera base to the mounting post.
- Refer to the installation Guide provided with the camera for further camera alignment and operation details.

Mounting Diagram

