


Changing IP address for IP Camera

1. Changing all the exe.config files in C:\Program Files (x86)\COBAN Technologies, Inc\COBAN CommandSystem
2. Change the IP address for the Web.config file
C:\inetpub\wwwroot\Coban\ and C:\inetpub\wwwroot\Coban\CobanPlayer
3. Changed the IP camera IP address

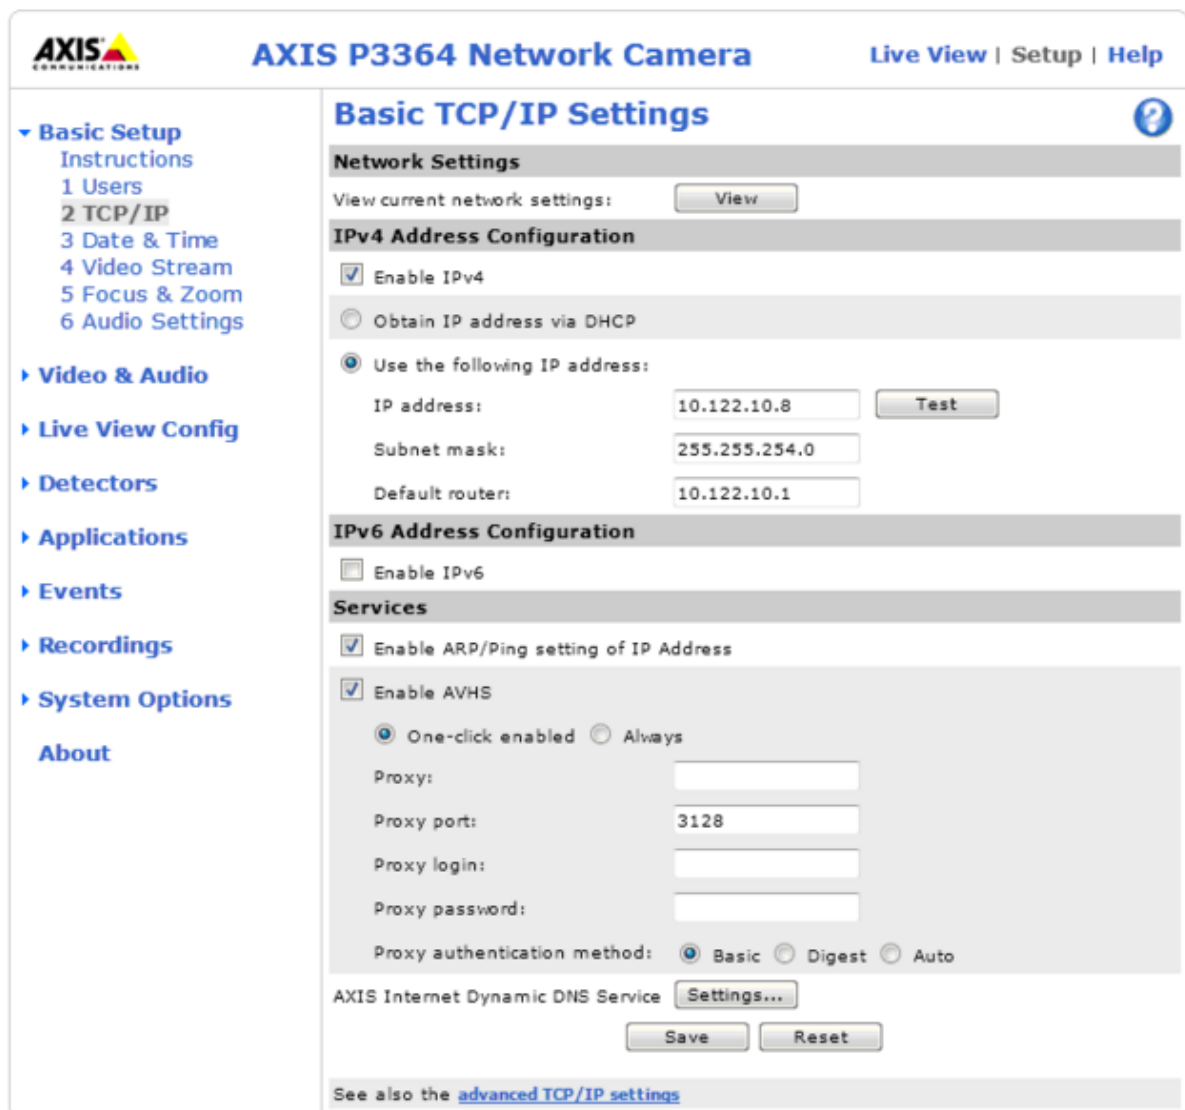


The screenshot displays the web interface for an AXIS P3364 Network Camera. The page title is "AXIS P3364 Network Camera" and it includes links for "Live View", "Setup", and "Help". A navigation menu on the left lists various configuration sections: Basic Setup (Instructions, 1 Users, 2 TCP/IP, 3 Date & Time, 4 Video Stream, 5 Focus & Zoom, 6 Audio Settings), Video & Audio, Live View Config, Detectors, Applications, Events, Recordings, System Options, and About.

The main content area is titled "Basic TCP/IP Settings" and contains the following sections:


- Network Settings:** A "View" button to check current settings.
- IPv4 Address Configuration:**
 - Enable IPv4
 - Obtain IP address via DHCP
 - Use the following IP address:
 - IP address: 10.122.10.8 (with a "Test" button)
 - Subnet mask: 255.255.254.0
 - Default router: 10.122.10.1
- IPv6 Address Configuration:**
 - Enable IPv6
- Services:**
 - Enable ARP/Ping setting of IP Address
 - Enable AVHS
 - One-click enabled Always
 - Proxy: [text box]
 - Proxy port: 3128
 - Proxy login: [text box]
 - Proxy password: [text box]
 - Proxy authentication method: Basic Digest Auto
- AXIS Internet Dynamic DNS Service: [Settings... button]

At the bottom of the configuration area are "Save" and "Reset" buttons. A footer note says "See also the [advanced TCP/IP settings](#)".


4. Restart the Services
5. Login to CCC. If you unable to launch the CCC, make sure the IIS binding is to the correct IP address

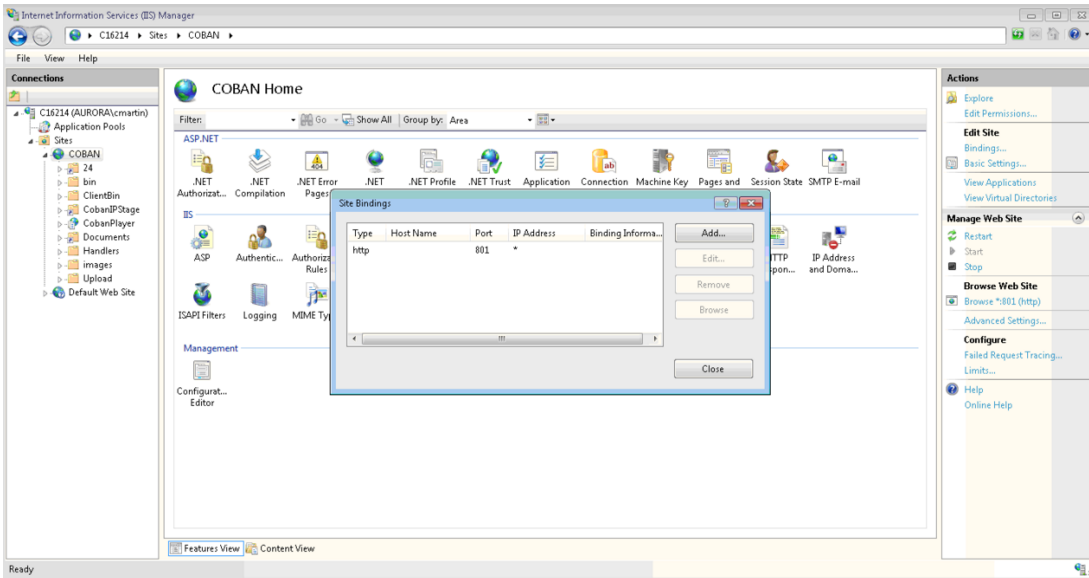

6. Add the new IP address to the trusted site. (Note, make sure all the Client machines also added to the trusted site)
7. Make sure the Storage> Primary Disk > Storage Name have the correct IP address. If it is the servername, it will be fine.
8. Change IP address for the Camera itself. To get the Save button, click [here](#)

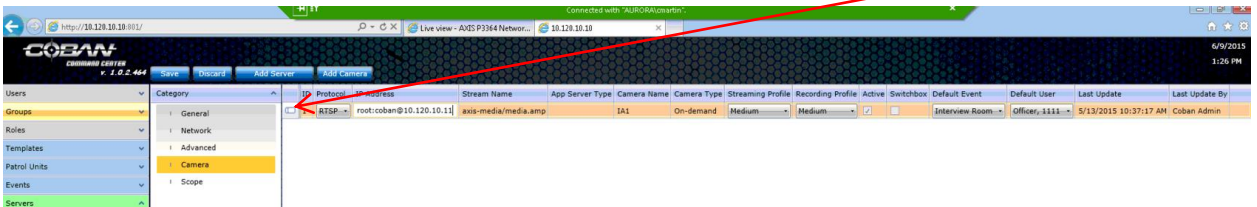

9. Change CobanIPStage IP address

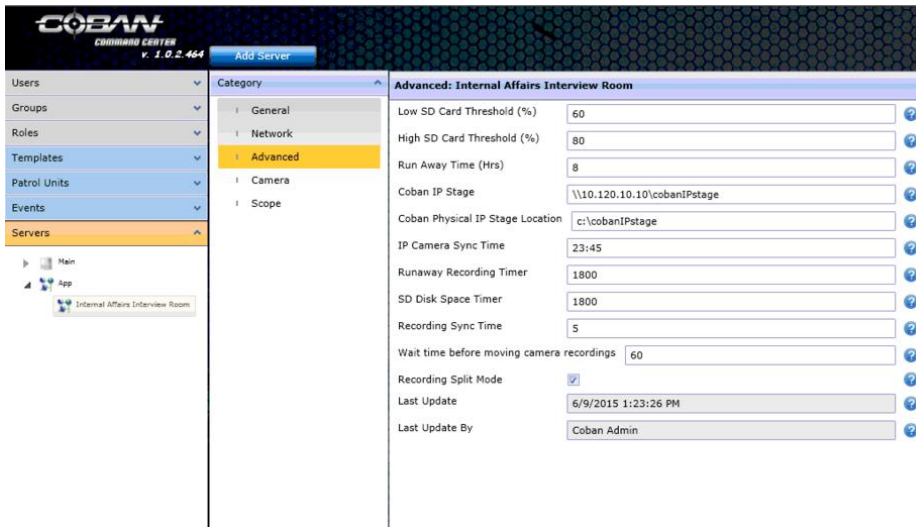

10. Restart Coban System and make sure the other Coban Agent services are running.
11. Retest the Interviewroom system